



"USER INSTRUCTIONS"

637B - MARKET UMBRELLA w/LED LIGHTS

Remove all contents from carton.

Align button on bottom pole to hole opening on lower part of main frame. Insert bottom pole for a secure fit. Secure umbrella in a base.

Connect end of power supply to connector located on bottom pole. To prevent risk of electrical shock, power supply must be placed on a dry, flat surface.

Power supply should be connected to a GFI outlet, to prevent power surges to unit.

Open umbrella by turning manual crank handle in a clockwise direction. Light function is operated by button on housing.

Press #1 = Flash 1 / Press #2 = Flash 2

Press #3 = Steady On / Press #4 = Off

Limited Warranty Policy

Tropishade umbrellas are warranted for a period of 1 year from the original date of consumer purchase.

Umbrella should be removed and stored away during extreme weather conditions, including wind, rain, snow or extreme cold. Damage as a result of above conditions is not covered under warranty.

DAMAGE CAUSED FROM WIND CONDITIONS ARE NOT COVERED UNDER WARRANTY!

Damage indicative of wind include broken ribs and bent aluminum poles.